

GB**INSTRUCTIONS MANUAL -***Read and save these important instructions.**Please keep for futur use.***INDOOR AND OUTDOOR USE UNDER SHELTER****INSTALLATION INSTRUCTIONS**

- 1 - Install battery into the box, respecting the polarity indicated in the battery compartment.
- 2 - Use only the battery recommended for this product.
- 3 - Make sure the hood gets well into the battery box to close it.
- 4 - After installing battery, swith the button (2) «ON », « OFF » to turn on or off the product, or choose «TIMER» option.
- 5 - Timer option: As soon as you choose «TIMER» button, the decoration will light up for 5 hours. After this time, it will turn off for 19 hours and then start again. If you press the button while the product is switched off, the 5 hours program will start, followed by the 19 hours time left.
- 6 - The light time differs depending on the battery quality. When unused for a long period of time, remove the battery from the product to avoid potential oxidization.



RECOMMANDATIONS IMPORTANTES

1 - The components of this product are not substitutable. If any part is damaged the whole product must be disposed. Do not disassemble in case of malfunction.

2 - WARNING:

only use AA 1,5V batteries, inserted in accordance with the polarity indicated in the battery compartment. Batteries must be disposed of safely : they must be removed from the device prior to its disposal ; they must be placed separately in the designated collection facilities in accordance with current legislation. If your batteries are damaged or exhibit signs of leakage, they can cause personal injury.

- 3 - Never try to charge non-rechargeable batteries.
- 4 - The accumulators must be removed from the product before recharging.
- 5 - Only the batteries or accumulators of recommended or similar type should be used.
- 6 - When your blanket is not used, keep it in a dry place. Do not switch on the blanket if it is damp.
- 7 - Never submerge the product in water. If you wish to clean the appliance, wipe it with a slightly damp cloth or sponge.
- 8 - When the appliance is in use, the card must be placed on the table as indicated in the drawing above.

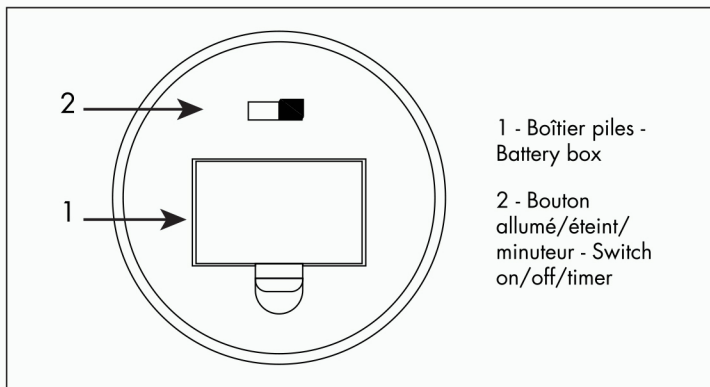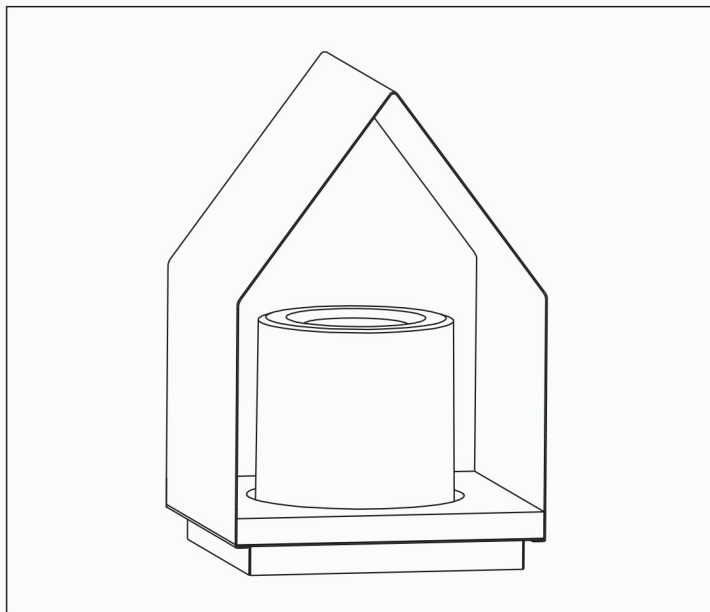

1 - Boîtier piles -
Battery box

2 - Bouton
allumé/éteint/
minuteur - Switch
on/off/timer

