
Solar Rattan Basket

Introduction:

Congratulations on your purchase. We are proud to provide you an ecological-friendly product of superior quality. Please read this instruction carefully before use.

Initial charging:

If the solar panel is covered with a thin protective film, remove it before using the product. Remove the solar puck by aligning the arrows on the solar panel and basket and then lifting the solar panel. The basket may need to be turned upside down to allow the solar puck to fall out. Remove the solar puck and slide the OFF/ON switch to the ON position. Place solar puck on top of the basket and turn clockwise to lock into place. Place the solar light in a location where it can receive a full 8 hours of sunlight to allow the rechargeable battery to reach maximum capacity. The light will turn on automatically at dusk.

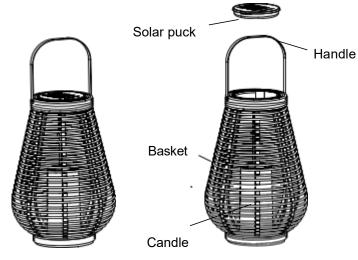

Charging Direction:

Place the solar light fixture in an area where it can receive direct sunlight for at least 8 hours each day. Shadowed locations will not allow the battery to charge fully and will reduce the hours of nighttime lighting. The selected location should not be near nighttime light sources, such as porch lights, street lights or pool lights, as these may cause the solar light to turn off prematurely.

Battery Replacement:

NOTE: This operation should be done in the morning on a sunny day. This will allow the lantern to receive a full 8 hours of sunlight so that the rechargeable battery can reach maximum capacity.

- Remove the solar puck by aligning the arrows on the solar panel and basket. The basket may need to be turned upside down to allow the solar puck to fall out.
- To open the battery compartment push clip inward and pull up .
- Remove the old battery and replace with a new same
 Specification rechargeable battery of same or greater
 capacity (mAh). (USE RECHARGEABLE BATTERIES ONLY)

Note: Clean the battery contacts and those of the device prior to battery installation.

- Be sure to insert the battery in proper direction.
- Replace the battery cover on the solar puck.
- Replace the solar puck by turning it clockwise.

Warning:

- Safe for outdoor operation.
- Failure to insert battery in the correct polarity, as indicated in the battery compartment, may shorten the life of the battery or cause battery to explode or leak.
- Do not dispose of batteries in fire.
- Batteries should be recycled or disposed of as per manufacturer's recommendations.
- Remove battery if consumed or if product is to be left unused for a long period.
- REPLACEMENT PARTS MAY BE ORDERED BY USING THE FIXTURE MODEL NUMBER AND THE PART'S NAME.

Care and Cleaning:

Solar panel should be cleaned periodically with damp cloth for maintaining optimum performance (to remove dust and debris). Do not place in areas where children normally play, or where they may trip and fall against the solar lantern.

NOTE: THE SWITCH MUST BE TURNED ON BEFORE CHARGING THE BATTERY.

